




Place graphic (which is on the backing sheet and already has application tape applied) onto the window and when located correctly secure in place with tape.

1




Place a piece of tape in the centre of the graphic, running vertically.

2

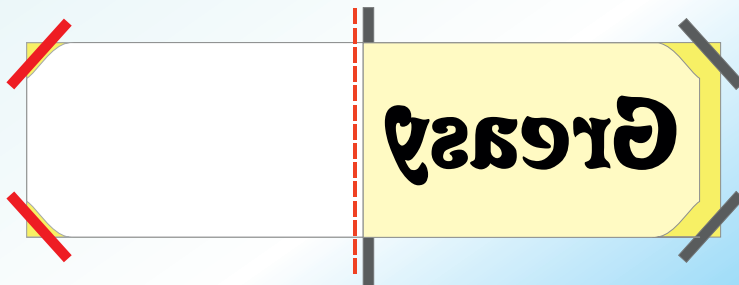

Leaving the backing liner in place peel back the application tape and graphic to the right. Temporarily secure in place and cut off backing liner that belongs to the left hand side of the graphic.

3

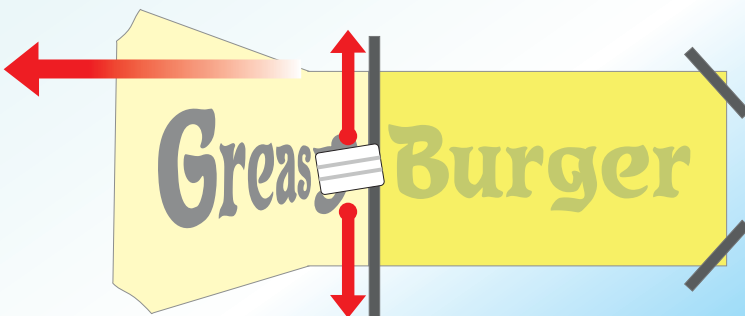


Take the graphic that you temporarily fixed. From the vertical centre tape start to squeegee from the centre towards the top edge and then again from the centre to the bottom edge. Continue working across the graphic from the right in the centre to the left hand side.

4




Remove the centre tape.

5

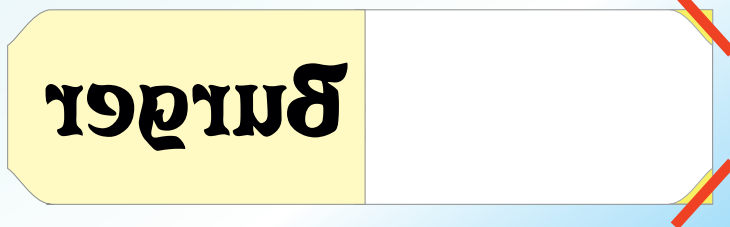

Leaving the backing liner in place peel back the application tape and graphic to the left. Temporarily secure in place and remove backing liner that belongs to the right hand side of the graphic.

6

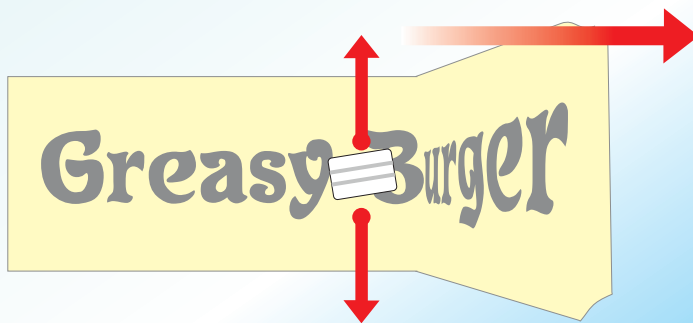

Squeegee down the right hand side of the graphic. Start to squeegee from the centre towards the top edge and then again from the centre to the bottom edge. Continue working across the graphic from the left in the centre to the right hand side.

7

**Greasy Burger**

Remove the application tape.

8